 
 


magicolor 8650

 
Quick Setup





Menu Select




(2x) ▼




Menu Select

  

Menu Select





 


Menu Select

 

Menu Select

 (2x)

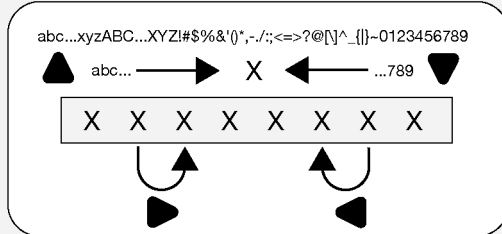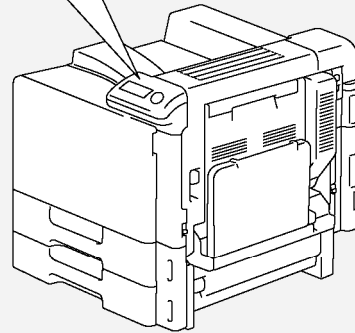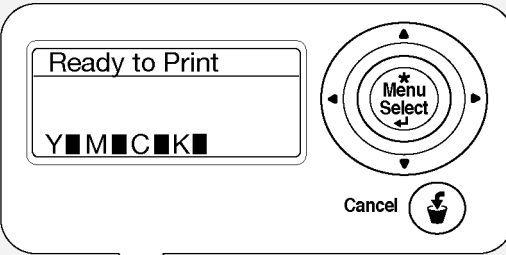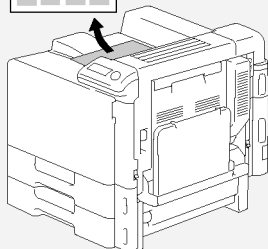

Menu Select



(4x) ▼



Menu Select



 
DEFAULT = 12345678




Menu Select




Menu Select




(1x) ▼

 


Menu Select

 


(1x) ▼

 

Menu Select

 

(2x)

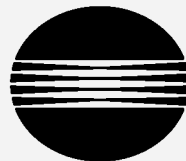

KONICA MINOLTA



B023025